

SONY

4-075-499-21 (1)

FD Trinitron

WEGA

Trinitron® Color TV

Operating Instructions

KV-27FS12
KV-27FS16
KV-27FV16
KV-32FS12
KV-32FS16

© 2000 by Sony Corporation

WARNING

To reduce the risk of fire or electric shock, do not expose the TV to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Note to the CATV Installer

This reminder is provided to call the CATV system installer’s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

SAFETY PRECAUTIONS


- ☐ Operate the TV only on 120 V AC.
- ☐ One blade of the power plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- ☐ If any liquid or solid object falls into the TV, unplug it and have it checked by qualified personnel before operating it further.

CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same channel can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the results of misuse.



To reduce the risk of electric shock, do not use this polarized plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

 You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antennas.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Protecting the TV

- ☐ To prevent internal heat build-up, do not block the ventilation openings.
- ☐ Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.

Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with § 15.119 of the FCC rules.

Use of this television for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster-cable company and/or program owner.

Owner's Record

The model and serial numbers are located on the front cover of this manual and the rear of your TV.

Trademarks and Copyrights

ENERGY STAR® is a registered mark.



As an ENERGY STAR® Partner, Sony has determined that this product or product model meets the ENERGY STAR® guidelines for energy efficiency.

Licensed by BBE Sound, Inc. under USP 4638258.4482866. BBE and BBE symbol are trademarks of BBE Sound, Inc.

(●)® SRS (SOUND RETRIEVAL SYSTEM) (KV-27FV16 only)

The (●) SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (●) are registered trademark of SRS Labs, Inc.

Important Safeguards

For your protection, please read these instructions completely, and keep this manual for future reference. Carefully observe and comply with all warnings, cautions and instructions placed on the set, or described in the operating instructions or service manual.

WARNING

To guard against injury, the following basic safety precautions should be observed in the installation, use, and servicing of the set.

Use

Power Sources

This set should be operated only from the type of power source indicated on the serial/model plate. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, refer to the operating instructions.



Grounding or Polarization

This set is equipped with a polarized AC power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding).

Follow the instructions below:

For the set with a polarized AC power cord plug

 
This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.



Alternate Warning


For the set with a three-wire grounding type AC plug

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.



Overloading

 
Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock. Always turn the set off when it is not to be used. When the set is left unattended and unused for long periods of time, unplug it from the wall outlet as a precaution against the possibility of an internal malfunction that could create a fire hazard.



Do not disconnect the antenna or the power cord during a heavy storm. Lightning may strike while you are holding the cable or cord, causing serious injury. Turn off your TV and wait for the weather to improve.

Object and Liquid Entry

 Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.



Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.



Do not place any objects, especially heavy objects, on top of the set. The object may fall from the set, causing injury.

Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.



If a snapping or popping sound from a TV set is continuous or frequent while the TV is operating, unplug the TV and consult your dealer or service technician. It is normal for some TV sets to make occasional snapping or popping sounds, particularly when being turned on or off.



Installation

Always use two or more people to lift or move the set. The set is heavy and the bottom surface is flat. Serious injury can result from trying to move the set by yourself alone, or from unsteady handling. Install the set on a stable, level surface.

Water and Moisture

Do not use power-line operated sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.



Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, table, or shelf. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart or stand recommended by the manufacturer for the specific model of TV. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

Disconnect all cables and cords from the set before attempting to move the set.



Do not allow children or pets to climb up onto, or push against, the set. The set may fall, causing serious injury.



 
Ventilation

The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- **Never cover the slots and openings with a cloth or other materials.**



- **Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.**



- **Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.**



- **Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.**



Power-Cord Protection

Do not allow anything to rest on or roll over the power cord, and do not place the set where the power cord is subject to wear or abuse.



Grounding or Polarization

This set may be equipped with a polarized alternating current line plug (a plug having one blade wider than other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact you electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

Antennas

Outdoor Antenna Grounding


If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the NEC

Refer to section 54-300 of Canadian Electrical Code for Antenna Grounding.

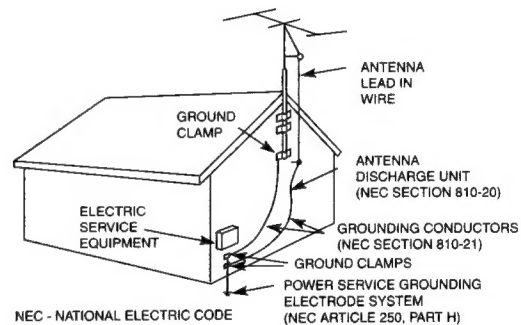

Lightning

 
For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.

Service

Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.



- If liquid has been spilled into the set.



- If the set has been exposed to rain or water.



- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.



- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.



- When the set exhibits a distinct change in performance — this indicates a need for service.

Servicing

Do not attempt to service the set yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



Replacement Parts

When replacement parts are required, be sure the service technician certifies in writing that he has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.



Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition, and to so certify. When the set reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the set.



Contents

Introduction

Trinitron® Color TV Features	1
Batteries for the Remote Control.....	2
About this Manual	2








Connecting Your TV

Basic Connections.....	3
Cable Box Connections.....	4
Connecting Additional Equipment	5

Using the Remote Control and Basic Functions

Using the Remote Control.....	14
Setting Up the TV Automatically.....	16
Using Picture in Picture (PIP).....	17
Quick Start to the Menus.....	18

Using the Menus

Using the Video  Menu	22
Using the Audio  Menu.....	23
Using the Channel Setup  Menu.....	25
Parental Control.....	27
Using the Parental Control  Menu.....	30
Using the Timer  Menu.....	33
Using the Setup  Menu	34
Using the Basic  Menu.....	35

Other Information

Programming the Remote Control	36
Troubleshooting	39
Specifications.....	41

Index.....	43
-------------------	-----------

Introduction

Congratulations on your purchase of the Sony Trinitron® Color TV. Before you begin using this manual, please check the model number located on the rear of your TV or on the front cover of this manual.


Trinitron® Color TV Features

Some of the features you will enjoy include:

- ❑ **FLAT CRT** — New technologically advanced screen for optimal picture quality.
- ❑ **Parental Control** — A tool for parents to help monitor what their children watch on TV by establishing rating limits.
- ❑ **Favorite Channel** — Instant access to your favorite channels with the touch of a button.
- ❑ **Picture in Picture (PIP)** — Allows you to view two channels simultaneously (KV-27FV16, KV-27FS16, KV-32FS16 only).
- ❑ **Universal Remote Control** — Program your remote control to operate your connected cable box, VCR, digital satellite receiver, or DVD player.
- ❑ **Energy Star®** — A recognized symbol of energy efficiency.
- ❑ **S VIDEO** — A video input that offers enhanced picture quality.
- ❑ **Direct MTS** — Allows direct access to changing your Multi-Channel TV Sound: Stereo, Mono, or Auto-SAP (Second Audio Program), with the touch of a button.
- ❑ **Trilingual Menus** — Choose between English, French, or Spanish menus.
- ❑ **Front Panel Controls** — Allows for access to the on-screen menus without the use of a remote control.
- ❑ **Front A/V inputs** — A quick connection for video games, camcorders, or stereo/mono equipment.

Batteries for the Remote Control

Insert two AA (R6) batteries (supplied) into the remote control using the following illustration as a guide.

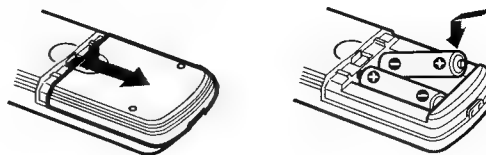

- ✎ Under normal conditions, batteries will last up to six months. If the remote control does not operate properly, the batteries might be worn out.
- ✎ If you will not be using the remote control for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- ✎ Your remote control can be programmed to operate most video equipment, (see page 36).

About this Manual

This manual provides instructions to help you enjoy your new TV. It shows you how to connect to an antenna or cable, cable box, VCR, DVD, satellite receiver, stereo system or camcorder. Once you are connected, follow the instructions and use the remote control to access the on-screen menus.

- ✎ The TV front and rear panels illustrated in this manual are for KV-27FS12, KV-27FS16, KV-32FS12, and KV-32FS16. The rear panel shown on pages 7 and 13 is for KV-27FV16. Your front and rear panels may not look exactly like those illustrated.


Connecting Your TV


Read this chapter before setting up your TV for the first time. This section covers basic connections in addition to any optional equipment you may be connecting.

Basic Connections

TV with indoor or outdoor antenna, or CATV cable

Depending on the cable available in your home, choose one of the connections below:

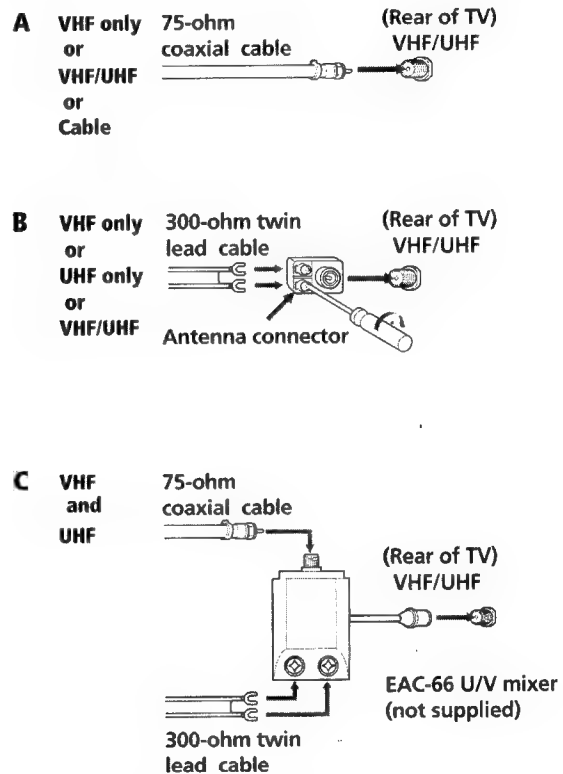


 If you are connecting to an indoor or outdoor antenna, you may need to adjust the orientation of the antenna for best reception.

Cable Box Connections

Some pay cable TV systems to use scrambled or encoded signals that require a cable box to view all channels.

Cable Box

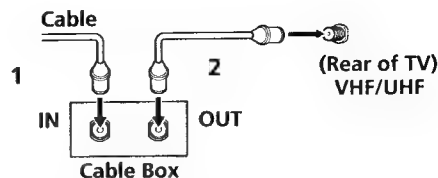


- 1** Connect the coaxial cable from your cable service to the IN jack on your cable box.
- 2** Connect a coaxial cable (not supplied) from the OUT jack on your cable box to the VHF/UHF jack on your TV.

If you will be controlling all channel selection through your cable box, you should consider using the Channel Fix feature, (see page 26).

Cable Box and Cable

For this set up, you can switch between scramble channels (through your cable box), and normal (CATV) channels by using the button.

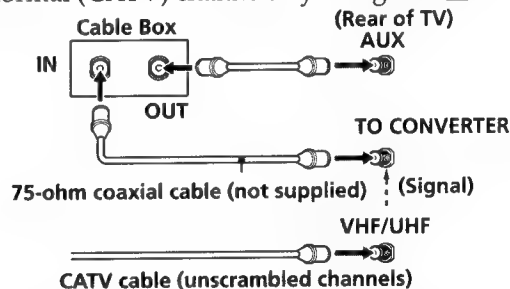


If you are connecting a cable box through the AUX input and would like to switch between the AUX and normal (CATV) input, you should consider using the Channel Fix feature, (see page 26).

Your Sony remote control can be programmed to operate your cable box, (see page 36).

When using PIP, you cannot view the AUX input in the window picture.

Connecting Additional Equipment

TV and VCR

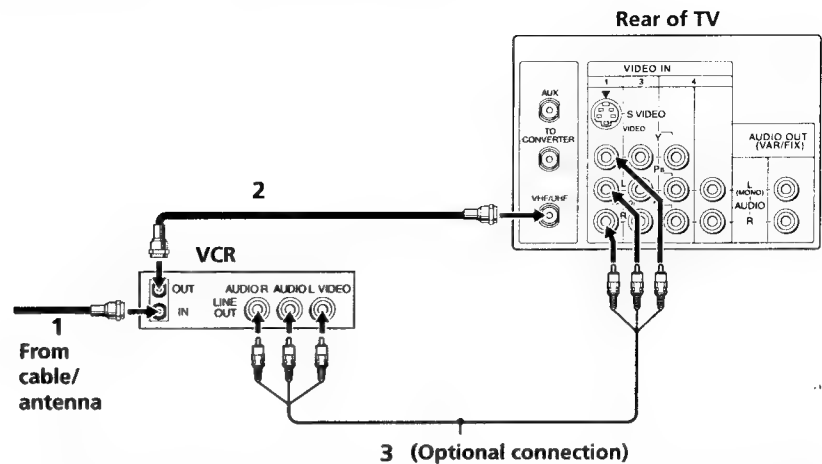

- 1** Connect the coaxial cable from your TV antenna or cable service to the IN jack on your VCR.
- 2** Connect a coaxial cable (not supplied) from the OUT jack on your VCR to the VHF/UHF jack on the TV.

To watch video programs from your VCR, tune your TV to channel 3 or 4 (as set on the rear of your VCR).


(Optional connection)

- 3** If your VCR is equipped with video outputs, you can get better picture quality by connecting A/V cables (not supplied) from AUDIO and VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, the audio cables must still be connected.

You can use the button to switch between the VHF/UHF and VIDEO inputs.

TV and Cable Box

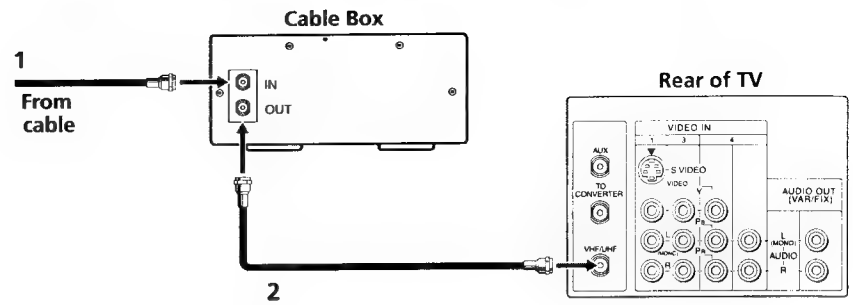


- 1** Connect the coaxial cable from your cable service to the IN jack on your cable box.
 - 2** Connect a coaxial cable (not supplied) from the OUT jack on your cable box to the VHF/UHF jack on the TV.
- To view channels from your cable box, tune your TV to channel 3 or 4 (as set on the rear panel of your cable box) and use the cable box's remote control to change channels.
 - If you will be controlling all channel selection through your cable box, you should consider using the Channel Fix feature, (see page 26).

TV, Cable box, and Cable


KV-27FS16, KV-27FV16, KV-32FS16 only

For this set up, you can switch between scrambled channels (through your cable box) and normal (CATV) channels by pressing **ANT**.

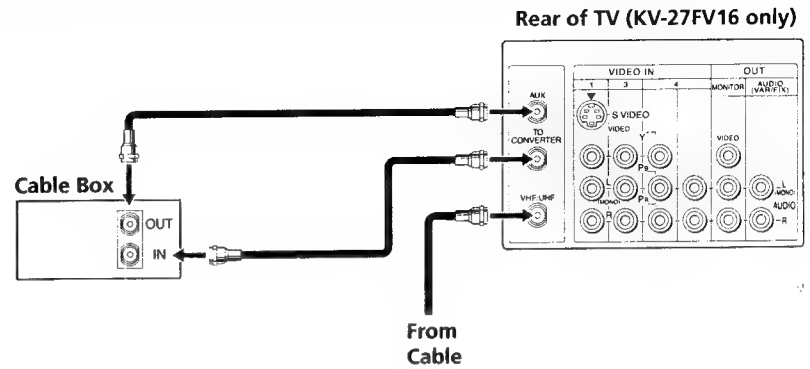

When using PIP, the AUX input cannot be viewed in the window picture.

TV, VCR, and Cable box

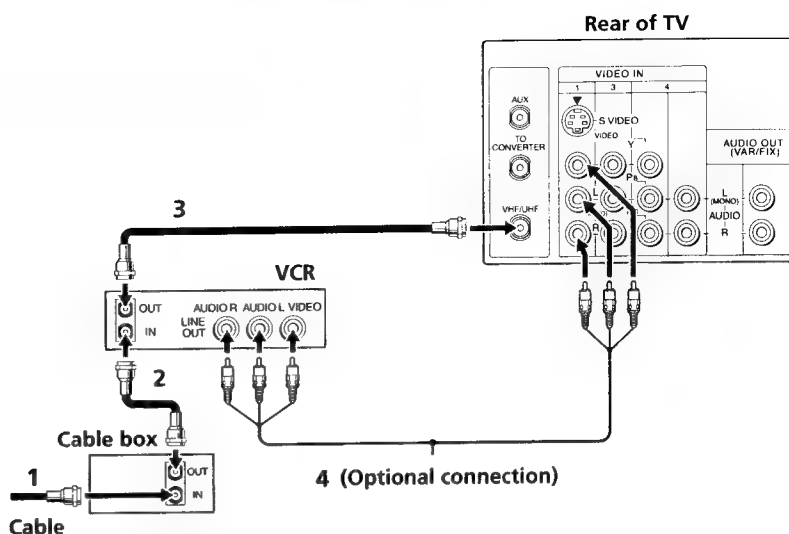

- 1** Connect the coaxial cable from your cable service to the IN jack on your cable box.
- 2** Connect a coaxial cable (not supplied) from the OUT jack on your cable box to the IN jack on your VCR.
- 3** Connect a coaxial cable (not supplied) from the OUT jack on your VCR to the VHF/UHF jack on the TV.

If you will be controlling all channel selection through your cable box, you should consider using the Channel Fix feature, (see page 26).


(Optional connection)

- 4** If your VCR is equipped with video outputs, you can get better picture quality by connecting A/V cables (not supplied) from AUDIO and VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.


For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, the audio cables must still be connected.

You can use the button to switch between the VHF/UHF and VIDEO inputs.

TV and Satellite Receiver

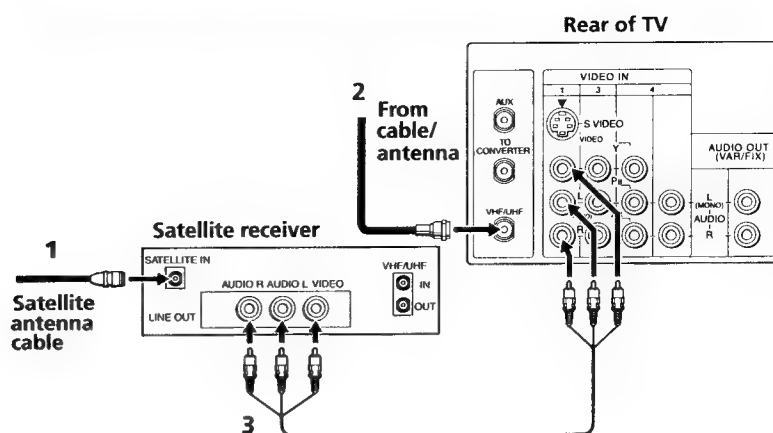


- 1** Connect the cable from your satellite antenna to SATELLITE IN on your satellite receiver.
- 2** Connect the coaxial cable from your cable or antenna to the VHF/UHF jack on your TV.
- 3** Using A/V cables, connect AUDIO and VIDEO OUT on your satellite receiver to AUDIO and VIDEO IN on your TV.


 For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, the audio cables must still be connected.

 You can use the  button to switch between the VHF/UHF and satellite receiver inputs.

TV, Satellite Receiver, and VCR

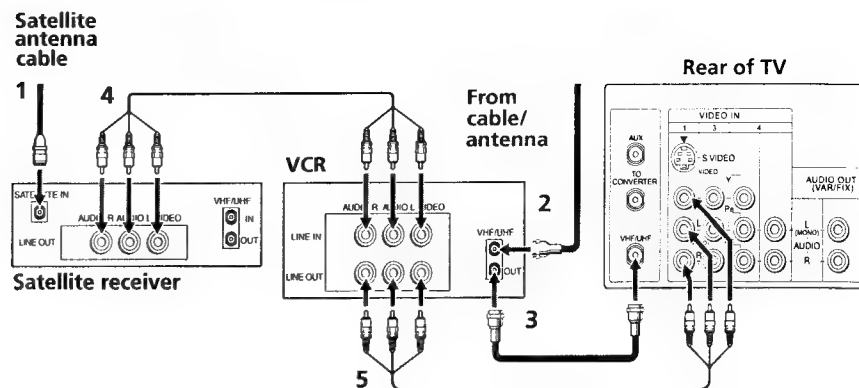


- 1** Connect the cable from your satellite antenna to SATELLITE IN on your satellite receiver.
- 2** Connect the coaxial cable from your cable or antenna to the IN jack on your VCR.
- 3** Using a coaxial cable, connect the OUT jack on your VCR to the VHF/UHF jack on your TV.
- 4** Using A/V cables, connect AUDIO and VIDEO OUT on your satellite receiver to AUDIO and VIDEO IN on your VCR.
- 5** Using A/V cables, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

 To view from the satellite receiver or VCR, select the video input to which your satellite receiver or VCR is connected by pressing **TV/VIDEO** on the remote control.

Connecting a Camcorder


Using A/V cables, connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on your TV.

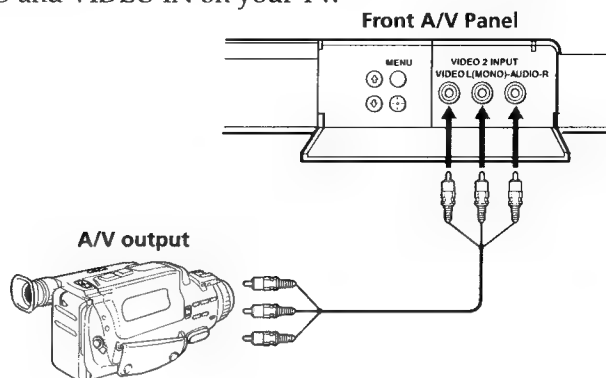

If you have an S VIDEO equipped camcorder, you can use an S VIDEO cable for optimum picture quality.

Connecting a DVD Player


- 1 Using A/V cables, connect AUDIO - R and - L OUT on your DVD player to AUDIO - R and - L IN on your TV.
- 2 Using A/V cables, connect VIDEO OUT on your DVD player to VIDEO IN on your TV.

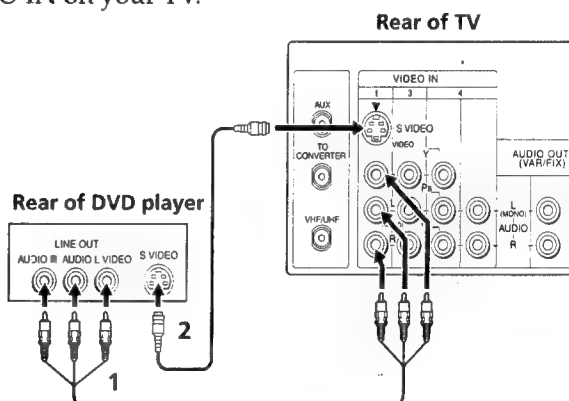

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, the audio cables must still be connected.

Connecting an Audio System

Using A/V cables, connect AUDIO OUT on your TV to one of the unused line inputs (e.g. TV, AUX, TAPE2) on your stereo.

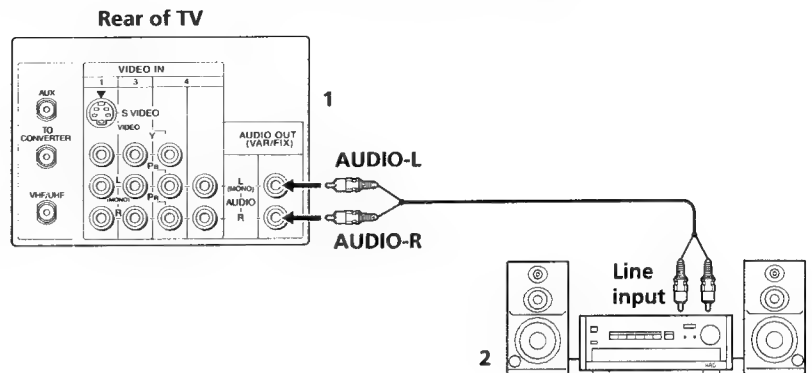


2. Set your stereo to the chosen line input. See page 23 for additional audio setup instructions.


Connecting Two VCRs for Tape Editing

KV-27FV16 only

MONITOR OUT gives you the ability to use a second VCR to record a program being played by the primary VCR to perform tape editing.

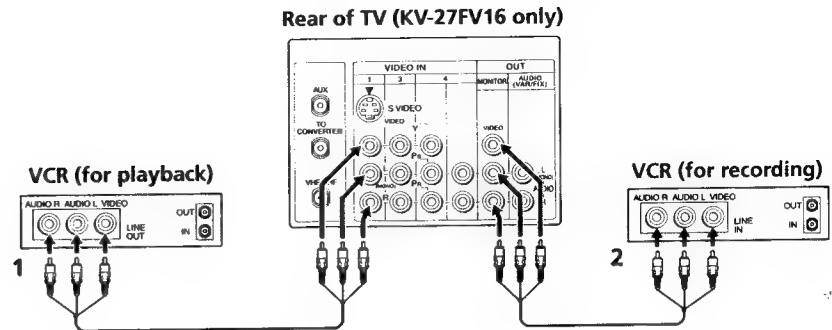


- 1** Connect the VCR for playback by using the setup instructions on page 5 of this manual.
- 2** Using A/V cables, connect AUDIO and VIDEO IN on your VCR for recording to MONITOR AUDIO and VIDEO OUT on your TV.

 To perform tape editing, set the TV to the video input intended for playback by pressing **TV/VIDEO**.

Using the Remote Control and Basic Functions


This section shows you how to use the more advanced buttons on the remote control and how to use the on-screen menus.

Using the Remote Control

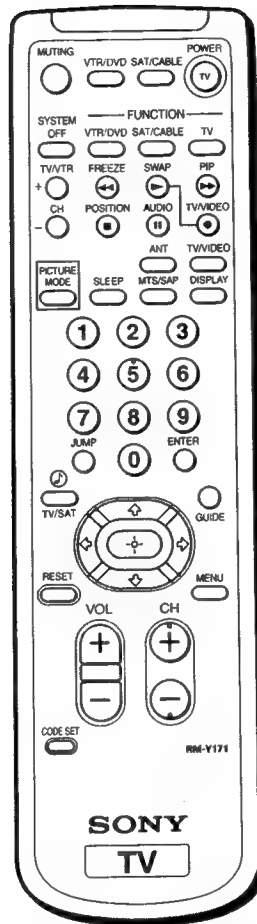

Button	Description
POWER	Press when you want to turn connected equipment on and off.
FUNCTION	Press when you want to control connected equipment with your remote control.
MUTING	Instantly turns off the sound. Press again or press to restore sound.
SYSTEM OFF	Powers off all Sony equipment at once, (may not work with older equipment).
TV/VIDEO	Cycles through available video inputs.
ANT	Press to change the VHF/UHF input to the AUX input (KV-27FS16, KV-27FV16, KV-32FS16 only).
TV/VTR	Press when you are finished using a VCR and you want to switch to the TV input. Your VCR power will remain on.
	Moves the cursor in the on-screen menus. Press the arrow buttons to move the cursor. Press the center button to select or access an option.
PICTURE MODE	Cycles through the available Video Mode settings.

The remote control shown (RM-Y171) is for KV-27FV16. Your remote control may not look like the one illustrated.

SLEEP	Turns the TV off automatically in approximately 15, 30, 45, 60, 90, or 120 minutes. Cancel by pressing until SLEEP OFF appears.
MTS/SAP	Cycles through the Multi-channel TV Sound (MTS) options: Stereo, Mono, and Auto-SAP (Second Audio Programming).
DISPLAY	Press once to show current time, (if set) and channel number.
	Cycles through available Steady Sound settings, (see page 23).
JUMP	Alternates between the last two channels selected with the 0 - 9 buttons.
GUIDE	Brings up the custom guide of your satellite receiver.
MENU	Displays the on-screen menu. Press again to exit the menu at any time.
RESET	Press to return to factory settings while in an on-screen menu.
CODE SET	Use to program your remote control to operate connected video equipment, (see page 36).


 For information on Picture in Picture (PIP) operation buttons, see page 17.


 If you lost your remote control, see page 40.

Setting Up the TV Automatically





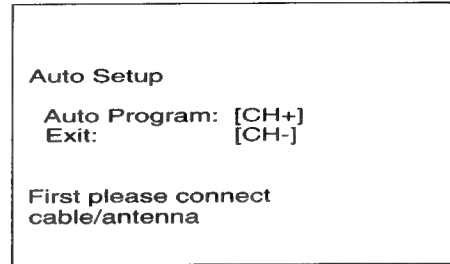








After you have finished connecting your TV, you can perform Auto Program to set up your channels.


- 1 Press  to turn on the TV. The Initial Setup screen appears.



- 2 Press  on the remote control or in the TV front panel to perform Auto Program.


To perform Auto Program again

- 1 Press .
- 2 Press  to highlight Channel ().
- 3 Press  to highlight Cable. Press  or  to select.
- 4 Press  or  to select ON or OFF according to how you connected your TV. Press  or .
- 5 Press  to highlight Auto Program. Press  or  to search for channels.

 The Initial Setup screen appears each time you turn on the TV until you perform Auto Program.

Using Picture in Picture (PIP)

The Picture-in-Picture (PIP) feature allows you to view two channels simultaneously, one in the full size “main” picture and one in a smaller “window” picture.

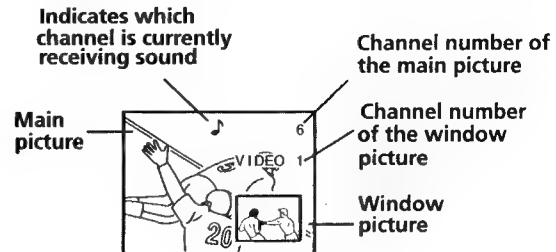

Dual Tuner PIP

KV-27FS16, KV-27FV16, KV-32FS16 only

These models are equipped with dual tuners. This means that PIP is “ready to use.”

PIP 	Press to display and change the size of the window picture. To cancel, press until the window picture turns off.
TV/VIDEO 	Press repeatedly to cycle through available video inputs.
AUDIO 	Press to alternate sound between the main picture and the window picture.
TV/VTR + CH - 	Press to change the channel in the window picture.
POSITION 	Press to move the location of the window picture.
FREEZE 	Press to freeze the window picture. Press again to restore the picture.
SWAP 	Press to swap the main picture with the window picture.

The AUX input cannot be viewed in the window picture.


Quick Start to the Menus

The following settings are available in your on-screen menus:


Menu

Allows you to


Make adjustments to your picture settings.

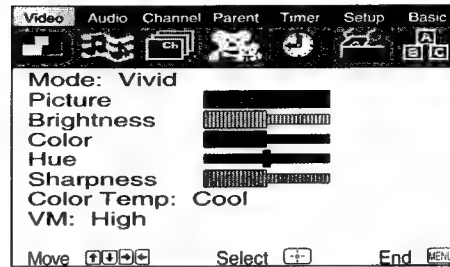


Change your audio settings.

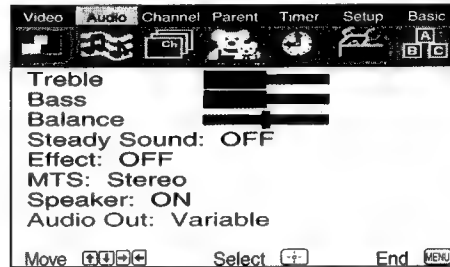


Customize your channel settings.

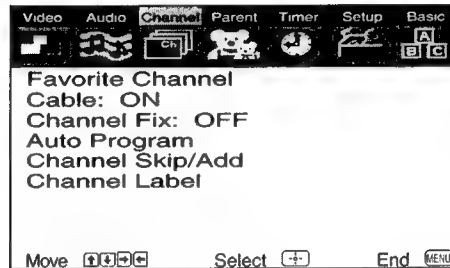


 The menus illustrated in this manual are for KV-27FV16. Your menus may not look like those illustrated.

Menu

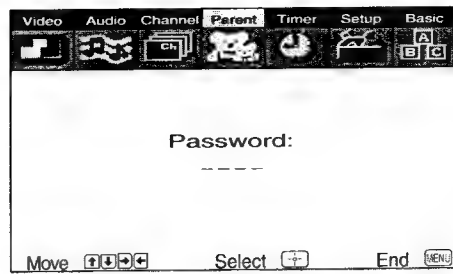


Allows you to

Set rating limits on your TV based on a program's rating or content.

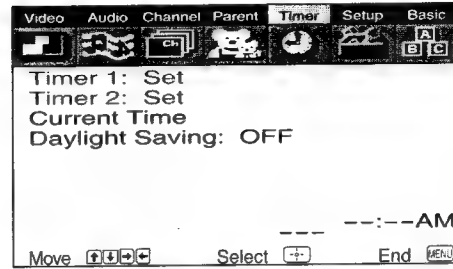

Set the clock on your TV and program scheduled viewing using Timer 1 and Timer 2.

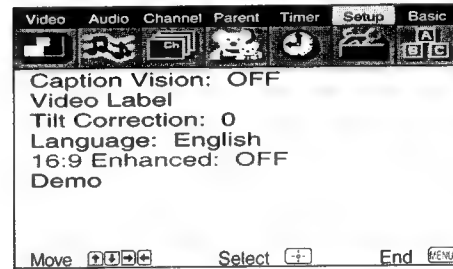

Program your channels, label video inputs, select menu languages, or run a demo of the menus.



Set basic settings for your TV.












11

→

Using the Menus


This section shows the options available for setting up and adjusting your TV.

To access a menu

- 1** Press .
- 2** Use  or  to move through the menus.
- 3** Use the  or  buttons to highlight an option.
- 4** Press  or  to select or access an option.
- 5** After adjusting or selecting an option, press  or  to complete the adjustment.
- 6** Press  to go to the previous menu, or press  to close the menu.

Using the Video Menu

To access the Video menu, see "To access a menu" on page 21.

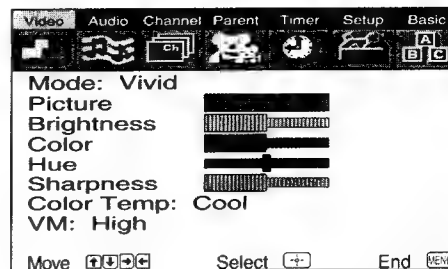

Mode
*Customized
picture viewing*

Vivid: Select for enhanced picture contrast and sharpness.

Standard: Select for a standard picture.

Sports: Select for a bright picture.

Movie: Select for a finely detailed picture.

 Press  for direct Mode settings (Vivid, Standard, Sports, Movie).

Picture
Picture contrast

Press  or  to decrease picture contrast.

Press  or  to increase picture contrast.



Brightness
*Picture
adjustment*

Press  or  to darken the picture.

Press  or  to brighten the picture.

Color
Color saturation

Press  or  to decrease color saturation.

 

Press  or  to increase color saturation.

Hue
Color tones

Press  or  to increase the red tones.

Press  or  to increase the green tones.

Sharpness
Picture detail

Press  or  to soften the picture.

Press  or  to sharpen the picture.

Color Temp
*White intensity
adjustment*

Cool: Gives the white colors a blue tint.

Neutral: Gives the white colors a neutral tint.


Warm: Gives the white colors a red tint.





VM
*Velocity
Modulation*

Sharpens picture definition to give objects a sharp, clean edge. Select from one of the following options: **High**, **Low**, **OFF**.

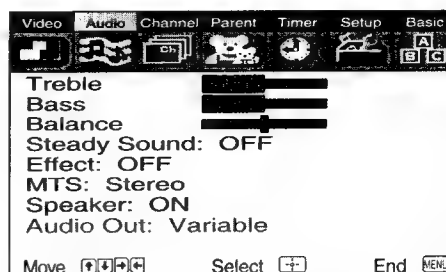



Using the Audio Menu



To access the Audio menu, see “To access a menu” on page 21.





Treble Press  or  to decrease the higher pitched sound.
Press  or  to increase the higher pitched sound.

Bass Press  or  to decrease the lower pitched sound.
Press  or  to increase the lower pitched sound.

Balance Press  or  to emphasize the left speaker sound.
Press  or  to emphasize the right speaker sound.

Steady Sound KV-27FV16 only
Stabilizes volume Press  or  to select one of the following options:
ON: Select to stabilize the volume when changing channels.
OFF: Select to turn Steady Sound off.

Press  for a direct selection of Steady Sound settings.

Effect Press  or  to select one of the following options:
OFF: Normal stereo or mono reception.
SRS: Produces a dynamic three dimensional sound for stereo audio signals (KV-27FV16 only).
Simulated: Add a surround-like effect to mono programs (KV-27FV16 only).
Surround: Simulates theater quality sound for stereo programs (KV-27FS12, KV-27FS16, KV-32FS12, KV-32FS16 only).


MTS

*Multi-Channel
sound*

Stereo: Select when viewing a broadcast in stereo.

Mono: Select to reduce noise in areas of poor reception.

Auto-SAP: Select to have the TV automatically switch to a Second Audio Program (SAP) when a signal is received.

 If your TV is set to Auto-SAP, some programs may be muted or distorted. If your TV does not output sound, change your Audio settings to Stereo or Mono.

 Press  for direct MTS settings (Stereo, Mono, Auto-SAP).

Speaker

*Custom selection
of audio output
source*

ON: Select to listen to the sound from the TV speakers with or without a separate stereo system.

OFF: Select to turn off the TV speakers and listen to the TV's sound only through external audio system speakers.

Audio Out

*Use to control the
TV's volume
through a stereo*

Variable: Adjust the volume through your TV.

Fixed: Adjust the TV volume through a connected stereo.

 Audio out can only be set when Speaker is set to OFF.

Using the Channel Setup Menu













To access the Channel Setup menu, see “To access a menu” on page 21.








Favorite Channel

Quick access to favorite channels

With the Favorite Channel menu open:

- 1 Press  or  to select.
- 2 Use the  or  buttons to select Auto or Manual. When Auto is selected, the last seven channels accessed by the **0-9** buttons will appear.
- 3 When in Manual, press  then  to select the position (1-7) where you want to set a favorite channel. Then press  or .
- 4 Using the  or  buttons, select the desired channel.
- 5 Press  then , the TV will change to the channel entered.


 To use Favorite Channel: Exit all menus and press . Press  or  to move the cursor to the desired channel number and press .

 After you close the menu, the PIP window picture appears so you can preview the favorite channel (KV-27FS16, KV-27FV16, KV-32FS16 only).

Cable

ON: Select if you are receiving cable channels with a CATV cable.

OFF: Select if you are using a TV antenna.

 After changing your cable settings, you will need to perform Auto Program.

Channel Fix

2-6: Select when you want to control all channel selection through a cable box or VCR. Select the appropriate channel (usually 3 or 4) and use the cable box's or VCR's remote control for channel selection.

Video 1: Select from available video inputs when you have connected video equipment (e.g. satellite receiver) and you want your TV fixed to it.

AUX 2-6: Select when the cable box is connected to AUX input.

Auto Program

Perform Auto Program whenever setting up your TV. It will cycle through all available channels and program any receivable channels.

Channel Skip/Add

Use this feature after you run Auto Program to skip unwanted channels or add new ones.

- 1 Use the **0-9** buttons or the [CH+/-] buttons to select the channel, then press **CH**.
- 2 Press **CH** to Skip or Add (only one option will be available).

Channel Label

Label up to 40 channels with their call letters

With the Channel Label window open:

- 1 Press **CH**, then press **↑** or **↓** until you reach the desired channel number.
- 2 Press **CH** to activate the channel.
- 3 Press **↓** then press **→** or **←** to highlight the label field.
- 4 Press **↑** or **↓** to display the first call letter or number of the caption and press **CH** to select it. When finished, press **CH** to activate.

 Favorite Channel, Channel Skip/Add, and Channel Label cannot be used when Channel Fix is set.

Parental Control


The Parental Control feature is designed to help parents monitor what their children watch on television. This section shows you the different rating systems available and how to set your TV's rating limit.

Overview of the Ratings

Once you have become familiar with these rating systems, you should be ready to set your TV's rating limit.

TV Ratings

The TV ratings are divided into two groups: age-based and content-based.

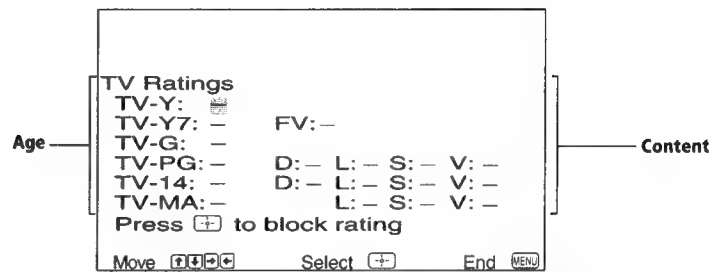

Age	Defined as	Contents	Defined as
TV-Y	All children	FV	Fantasy Violence
TV-Y7	Directed to older children	D	Suggestive dialogue
TV-G	General audience	L	Strong language
TV-PG	Parental Guidance suggested	S	Sexual situations
TV-14	Parents Strongly cautioned	V	Violence
TV-MA	Mature Audience only		

The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V (Violence) rating may contain moderate violence, while a TV-14 V (Violence) rating may contain intense violence.

Movie Ratings

(U.S. models only)

This system defines the rating levels of movies shown in theaters and on prime cable channels.

Rating	Defined as
G	General audience
PG	Parental Guidance suggested
PG-13	Parents strongly cautioned
R	Restricted
NC-17	No one 17 and under admitted
X	No one 17 and under admitted

Movie Ratings

G:

PG:

PG-13:

R:

NC-17:

X:

Press to block rating

Move Select End

Unrated

(U.S. models only)

You have the option of blocking TV programs or movies that are not rated.

Allow	Allows all unrated programs
Block	Blocks all unrated programming

Custom Ratings


Movie Ratings

TV Ratings

Unrated:

Press to set Movie rating

Move Select End

 If you choose to block unrated TV programs, please be aware that the following programs may be blocked: emergency broadcasts, political programs, sports, news, public service announcements, religious programs, and weather.

English Ratings

(Canadian models only)

These ratings are for Canadian programs that are broadcast in English.

Rating	Defined as
C	Children
C8+	Children 8 years and older
G	General programming
PG	Parental Guidance
14+	Viewers 14 and older
18+	Adult programming

English Rating

C:

C8+:

G:

PG:

14+:

18+:

Press to block rating

Move Select End

French Ratings

(Canadian models only)

These ratings are for Canadian programs that are broadcast in French.

Rating	Defined as
G	General
8 ans+	Not recommended for younger children
13 ans+	Not recommended for children under age 13
16 ans+	Not recommended for ages under 16
18 ans+	This program is restricted to adults

French Rating

G:

8 ans+:

13 ans+:

16 ans+:

18 ans+:

Press to block rating

Move Select End

U.S.A. Ratings


(Canadian models only)



For programs from the United States, see "TV Ratings" on page 27.


Using the Parental Control Menu

To access the Parental Control menu, see “To access a menu” on page 21.



In the Parental Control  menu, you will be asked to set a 4-digit password for any further access into Parental Control.

- 1 Press , then use the - buttons to enter a 4-digit password.


 Keep this instruction manual in a safe place. If you forget your password, see page 40.

- 2 Confirm your password by entering it again.

Once your password is set correctly, the next Parental Control menu appears.

Setting the rating


You can change the Rating by selecting one of the Parental Lock options.

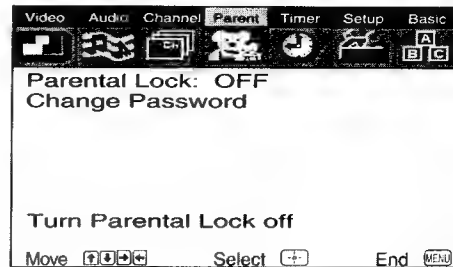

- 1 Move the cursor to Parental Lock and press \leftarrow or \rightarrow .

If you are not familiar with the Parental Guidelines rating system, use one of the following preselected categories to simplify the rating selections: OFF, Child, Youth, Young Adult, or Custom.

- 2 Use the \uparrow or \downarrow buttons to select the desired rating, and press \leftarrow or \rightarrow . To select Custom Ratings, press \leftarrow or \rightarrow .

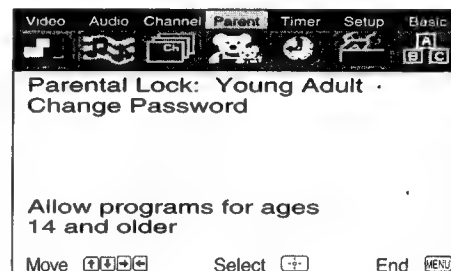


Rating	TV will allow a maximum rating of:
Child	TV-Y, TV-G, G (U.S. models only), G (Canadian models only)
Youth	TV-PG, PG (U.S. models only), PG (Canadian models only)
Young Adult	TV-14, PG-13 (U.S. models only), 14+ (Canadian models only)
Custom	Select to set more restrictive ratings, (see next section)
OFF	No rating limit





Using the Custom menu

Before setting Custom ratings, see pages 27-29, "Overview of the Ratings," for a description of the available rating systems.

Follow the instructions on the screen to make your custom settings. See page 28 for U.S. models and page 29 for Canadian models for more information.

-  Once you have blocked a rating or content, all higher ratings or content will be automatically blocked.


Changing your password

- 1** Use the  or  buttons to move the cursor to Change Password and press  or .
- 2** Follow the steps 2 and 3 of "Using the Parental Control Menu" on page 30.

Information for Parents

To view a program that exceeds the TV rating

- ☐ Press  ^{ENTER}, then use the - buttons to enter your password.

-  Entering your password to view a blocked program will temporarily turn Lock to OFF. To reactivate your Lock settings, turn the TV off then back on. The TV will return to the settings that you have selected.

Using the Timer ⌚ Menu

To access the Timer menu, see "To access a menu" on page 21.



Timer 1 and Timer 2 *Scheduled viewing*

With the menu open, set cursor on Timer 1 or Timer 2:

- 1 Press \leftarrow or \rightarrow , then press \leftarrow or \rightarrow again.
- 2 Press \uparrow or \downarrow until the desired day or range of days is displayed, then press \leftarrow or \rightarrow .
- 3 Press \uparrow or \downarrow to select the hour you want the TV to turn on, then press \leftarrow or \rightarrow .
- 4 Press \uparrow or \downarrow to select the minute you want the TV to turn on, then press \leftarrow or \rightarrow .
- 5 Press \uparrow or \downarrow to set the duration, up to 6 hours, then press \leftarrow or \rightarrow .
- 6 Press \uparrow or \downarrow to set the channel and press \leftarrow or \rightarrow .

You must set the Current Time before you can use Timer 1 and Timer 2.

You can set the Timer to ON, OFF, or Set. Once the timer is set, you can turn it on or off without having to go through the settings.

Current Time

With the menu open:

- 1 Press \leftarrow or \rightarrow .
- 2 Press \uparrow or \downarrow to select the day and press \leftarrow or \rightarrow .
- 3 Press \uparrow or \downarrow until the current hour is displayed, then press \leftarrow or \rightarrow .
- 4 Press \uparrow or \downarrow until the current minute is displayed, then press \leftarrow or \rightarrow .

Daylight Saving

OFF: Select in fall at the end of Daylight Saving.


ON: Select in spring to compensate for Daylight Saving.

When you perform Auto Program, all Timer 1 and Timer 2 settings will be cleared.

Any loss of power will cause Current Time, Timer 1, and Timer 2 settings to be cleared.

Using the Setup menu

To access the Setup menu, see "To access a menu" on page 21.

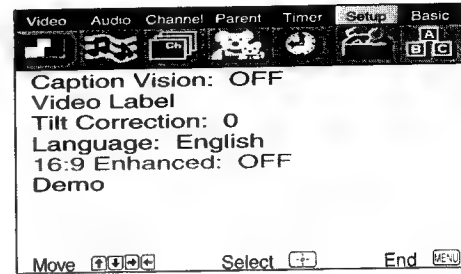

Caption Vision *Closed- Captioning*

Press \uparrow or \downarrow to select one of the following options:

OFF: Caption Vision is not activated.

CC1, 2, 3, 4: Displays printed dialogue and sound effects of a program.

TXT1, 2, 3, 4: Displays network/station information.

XDS (Extended Data Services): Displays information about the network and current program, if available.

Video Label *Label connected equipment*

With the Video Label window open:

1 Press \uparrow or \downarrow to access the input you want to label and press \rightarrow or \leftarrow .

2 Press \uparrow or \downarrow to choose a label and press \rightarrow or \leftarrow .

Tilt Correction

Press \uparrow or \downarrow to correct any tilt of the picture by -5 and +5, press \rightarrow or \leftarrow to activate.

Language

Display all menus in your language of choice.

Use the \uparrow or \downarrow buttons, select the desired language and press \rightarrow or \leftarrow .

16:9 Enhanced Demo


Provides enhanced picture resolution for wide screen sources such as DVD, (only available when the TV is in Video mode).







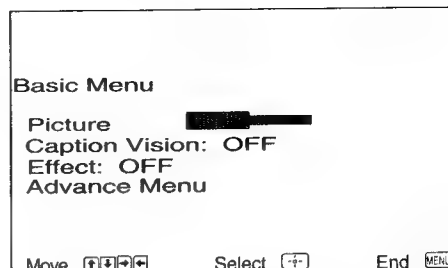

Select to perform a demonstration of the on-screen menus.





Using the Basic Menu

To access the Basic menu, see "To access a menu" on page 21.

Press  to enter the Basic Menu.









Picture	Press  or  to decrease picture contrast.
<i>Picture contrast</i>	Press  or  to increase picture contrast.
Caption Vision	Press  or  to select one of the following options:
<i>Closed-Captioning</i>	OFF: Caption Vision is not activated. CC1, 2, 3, 4: Displays printed dialogue and sound effects of a program. TXT1, 2, 3, 4: Displays network/station information. XDS (Extended Data Services): Displays information about the network and current program, if available.
Effect	Press  or  to select one of the following options:
	OFF: Normal stereo or mono reception. SRS: Produces a dynamic three dimensional sound for stereo audio signals (KV-27FV16 only). Simulated: Add a surround- like effect to mono programs (KV-27FV16 only). Surround: Simulates theater quality sound for stereo programs (KV-27FS12, KV-27FS16, KV-32FS12, KV-32FS16 only).
Advanced Menu	Select to return to the main menus.

 If you use the  button to close the Basic menu, only the Basic menu appears when you press  again. To have access to the other menus, use the  to select Advanced Menu.

Other Information

Programming the Remote Control

You can use the supplied remote control to operate Sony or non-Sony video equipment.

- 1** Press .
- 2** Press  or  (FUNCTION).
- 3** Use the - buttons to key in the code number from the following chart.
- 4** Press .

VCR codes

Sony	301, 302, 303	JCPenney	309, 305, 304, 330, 314, 336, 337
Admiral (M.Ward)	327	JVC	314, 336, 337, 345, 346, 347
Aiwa	338, 344	Kenwood	314, 336, 332, 337
Audio Dynamic	314, 337	LXI (Sears)	332, 305, 330, 335, 338
Broksonic	319, 317	Magnavox	308, 309, 310
Canon	309, 308	Marantz	314, 336, 337
Citizen	332	Marta	332
Craig	302, 332	Memorex	309, 335
Criterion	315	Minolta	305, 304
Curtis Mathis	304, 338, 309	Mitsubishi/MGA	323, 324, 325, 326
Daewoo	341, 312, 309	Multitech	325, 338, 321
DBX	314, 336, 337	NEC	314, 336, 337
Dimensia	304	Olympic	309, 308
Emerson	319, 320, 316, 317, 318, 341	Optimus	327
Fisher	330, 335	Panasonic	308, 309, 306, 307
Funai	338	Pentax	305, 304
General Electric	329, 304, 309	Philco	308, 309
Go Video	322, 339, 340	Philips	308, 309, 310
Goldstar	332	Pioneer	308
Hitachi	306, 304, 305, 338	Quasar	308, 309, 306
Instant Replay	309, 308	RCA/PROSCAN	304, 305, 308, 309, 311, 312, 313, 310, 329

VCR codes

Realistic	309, 330, 328, 335, 324, 338
Sansui	314
Samsung	322, 313, 321
Sanyo	330, 335
Scott	312, 313, 321, 335, 323, 324, 325, 326
Sharp	327, 328
Shintom	315
Signature 2000 (M.Ward)	338, 327
SV2000	338
Sylvania	308, 309, 338, 310

Cable box codes

Hamlin/Regal	222, 223, 224, 225, 226
Jerrold/G. I.	201, 202, 203, 204, 205, 206, 207, 208, 218
Oak	227, 228, 229
Panasonic	219, 220, 221
Pioneer	214, 215
Scientific Atlanta	209, 210, 211
Tocom	216, 217
Zenith	212, 213

Laser Disc Player codes

Sony	701
Panasonic	704, 710
Pioneer	702


Symphonic	338
Tashiro	332
Tatung	314, 336, 337
Teac	314, 336, 338, 337
Technics	309, 308
Toshiba	312, 311
Wards	327, 328, 335, 331, 332
Yamaha	314, 330, 336, 337
Zenith	331


Satellite receiver codes


Sony	801 (preset code for remote control)
General Electric	802
Hitachi	805
Hughes	804
Panasonic	803
RCA/PROSCAN	802, 808
Toshiba	806, 807

DVD codes






 

 
 
Sony	751
Panasonic	753
Pioneer	752
RCA	755
Toshiba	754

 If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.









 Whenever you remove the batteries the code numbers may revert to the factory setting and must be reset.

 In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's supplied remote control.






Operating a VCR

Press	To
	Power on the VCR
	Select channels directly
	Change channels
	Play video tape
	Stop
	Search forward or backward
	Pause
	Record
at the same time	
	Change between VCR and TV inputs

Operating a DVD


Press	To
	Power on the DVD
	Select chapters directly
	Search chapters forward or backward
	Play DVD
	Stop
	Pause
	Move the cursor in the menu
	Display the DVD menu


 

 





 

 

Operating a Laser Disc

Press	To
	Power on the laser disc
	Search chapters forward or backward
	Play disc
	Stop
	Pause

Troubleshooting

If you are having a problem with your TV, try the suggestions below. If the problem persists, contact your nearest Sony dealer.

No picture, no sound	<ul style="list-style-type: none"> <input type="checkbox"/> Make sure the power cord is plugged in. <input type="checkbox"/> If red light is flashing on the front of your TV for more than a few minutes, disconnect and reconnect the power cord to restore the TV. If the problem continues, call your local service center. <input type="checkbox"/> Check the TV / VIDEO settings: when watching TV, set to TV; when watching video equipment, set to VIDEO (page 14). <input type="checkbox"/> Make sure the batteries have been inserted correctly into the remote control (page 2). <input type="checkbox"/> Try another channel, it could be station trouble.
Poor or no picture, good sound	<ul style="list-style-type: none"> <input type="checkbox"/> Adjust Picture in the Video menu (page 22). <input type="checkbox"/> Adjust Brightness in the Video menu (page 22). <input type="checkbox"/> Check the antenna and /or cable connections (page 3).
Good picture, no sound	<ul style="list-style-type: none"> <input type="checkbox"/> Press  so that MUTING disappears from the screen (page 14). <input type="checkbox"/> Check your Audio settings. Your TV may be set to Auto-SAP (page 24).
No color	<ul style="list-style-type: none"> <input type="checkbox"/> Adjust Color in the Video menu (page 22).
No signal	<ul style="list-style-type: none"> <input type="checkbox"/> Check the Cable setting in the Channel Setup menu (page 25). <input type="checkbox"/> Check the antenna and /or cable connections (page 3). <input type="checkbox"/> Make sure the channel selected is currently broadcasting.
Dotted lines or stripes	<ul style="list-style-type: none"> <input type="checkbox"/> Adjust the antenna. <input type="checkbox"/> Move the TV away from other electronic equipment. Some electronic equipment can create electrical noise, which can interfere with TV reception.
Double images or ghosts	<ul style="list-style-type: none"> <input type="checkbox"/> Check your outdoor antenna or call your cable service.

Cannot receive higher number channels (UHF) when using an antenna	<input type="checkbox"/> Make sure Cable is set to OFF in the Channel Setup menu (page 25). <input type="checkbox"/> Perform Auto Program to add channels that are not presently in the memory (page 16).
Cable stations don't seem to work	<input type="checkbox"/> Make sure Cable is set to ON in the Channel Setup menu (page 25). <input type="checkbox"/> Perform Auto Program to add channels that are not presently in the memory (page 16).
Remote control does not operate	<input type="checkbox"/> Batteries could be weak. Replace them (page 2). <input type="checkbox"/> Move the TV 3-4 feet away from fluorescent lights.
The TV needs to be cleaned	<input type="checkbox"/> Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.
Lost password for Parental Control	<input type="checkbox"/> In the password screen, enter the following master password: 4357. After using the master password, you must create a new password, it cannot be used to unlock currently blocked channels.
You lost your remote control	<input type="checkbox"/> You can use the front A/V panel controls to access the menu. Press  to open the menu. Use the  or  buttons on the front A/V panel instead of the  or  buttons on the remote control. Use the  button on the front A/V panel instead of the  ,  , and  buttons on the remote control. Press  again when the setting or adjustment is complete. Contact your nearest Sony dealer to order a replacement.
Cannot access other menus when using the Basic Menu	<input type="checkbox"/> If you use the  button to close the Basic menu, only the Basic menu appears when you press  again. To have access to the other menus, use the  button to select Advance Menu (page 35).

If, after reading these Operating Instructions, you have additional questions related to the use of your Sony television, please call our Direct Response Center at 1-800-222-SONY (7669) (U.S. residents only) or (416) 499-SONY (7669) (Canadian residents only).

Specifications

For all models (except as noted)

Television system	American TV standard/NTSC
Channel coverage	VHF: 2-13/UHF: 14-69/CATV: 1-125
Antenna	75-ohm external antenna terminal for VHF/UHF
Picture tube	FD Trinitron® tube
Power requirements	120V, 60 Hz
Supplied Accessories	Size AA (R6) batteries (2) Remote Control RM-Y168 (1) (KV-27FS12, KV-32FS12) RM-Y169 (1) (KV-27FS16, KV-32FS16) RM-Y171 (1) (KV-27FV16)
Optional Accessories	Connecting cables VMC-810S/820S, VMC-720M, YC-YC-15V/30V, RK74A U/V mixer EAC-66 TV Stand: SU-27FD3 (27 inch models) SU-32FD3 (32 inch models)

KV-27FS12, KV-27FS16

Screen size	Visible screen size: 27 inch (686 mm) measured diagonally Actual tube size: 29 inch (736 mm) measured diagonally
Inputs/outputs	3 video, 3 audio 1 S VIDEO 1 AUDIO OUT 2 RF inputs (KV-27FS16) 1 Y, P _B , P _R
Speaker output	5 W x 2
Power Consumption	160 W in use (KV-27FS12) 170 W in use (KV-27FS16) 1 W in standby
Dimensions (W/H/D)	700 x 632 x 512 mm (27 ⁵ / ₈ x 25 x 20 ¹ / ₄ in.)
Mass	47 kg (103 lbs. 10 oz.)

KV-27FV16

Screen size	Visible screen size: 27 inch (686 mm) measured diagonally Actual tube size: 29 inch (736 mm) measured diagonally
Inputs/outputs	3 video, 3 audio 2 S VIDEO 1 Monitor Out 2 RF inputs 1 Y, P _B , P _R
Speaker output	15 W x 2
Power Consumption	220 W in use 1 W in standby
Dimensions (W/H/D)	762 x 604 x 519 mm (30 x 23 ⁷ / ₈ x 20 ¹ / ₂ in.)
Mass	49 kg (108 lbs.)

KV-32FS12, KV-32FS16


Screen size	Visible screen size: 32 inch (813 mm) measured diagonally Actual tube size: 34 inch (863 mm) measured diagonally
Inputs/outputs	3 video, 3 audio 1 S VIDEO 1 Audio Out 2 RF inputs (KV-32FS16) 1 Y, P _B , P _R
Speaker output	5 W x 2
Power Consumption	165 W in use (KV-32FS12) 170 W (KV-32FS16) 1 W in standby
Dimensions (W/H/D)	800 x 708 x 582 mm (31 ¹ / ₂ x 27 ⁷ / ₈ x 23 in.)
Mass	75 kg (163 lbs.)

Design and specifications are subject to change without notice.

 
Index

16:9 Enhanced 34


A

Advanced Menu 35
Audio  Menu 23
Audio Out 24
Auto Program 16, 26
Auto-SAP 24

B

Balance 23
Basic  Menu 35
Bass 23
Battery Installation 2
Brightness 22

C

Cable 25
Cable box Connections 4
Caption Vision 34, 35
Channel Label 26
Channel Fix 26
Channel Setup  Menu 25
Channel Skip/Add 26
Color 22
Color Temp 22
Connections
 Cable Box 4
 Cable and antenna 3
 Cable Box and Cable 4
 Connecting an Audio System 12
 Connecting a Camcorder 11
 Connecting a DVD Player 11
 Connecting Two VCRs for Tape Editing 13
 TV and Cable Box 6
 TV, Cable box, and Cable 7
 TV and VCR 5
 TV and Satellite Receiver 9

TV, Satellite Receiver, and VCR 10
TV, VCR, and Cable Box 8
Current Time 33

D

Daylight Saving 33
Demo 34

E

Effect 23, 35
 OFF 23, 35
 Simulated 23, 35
 SRS 23, 35
 Surround 23, 35

F

Favorite Channel 25


 





H

Hue 22

L

 Language 34


M

Menus
 Audio  23
 Basic  35
 Channel Setup  25
 Parental Control  30
 Setup  34
 Timer  33
 Video  22
Mode 22
 Vivid 22
 Standard 22
 Sports 22
 Movie 22
Mono 24
MTS 24
 Auto-SAP 24
 Mono 24
 Stereo 24

O

Overview of the Ratings 27


P

Parental Control 27
Parental Control  Menu 30
Picture 22
Picture in Picture (PIP) 17
Programming the
Remote Control 36


R

Remote Control 14
Ratings
 English Ratings 29
 French Ratings 29
 Movie Ratings 28
 TV Ratings 27
 Unrated 28
 U.S.A. Ratings 29

S

Setup  Menu 34
Sharpness 22
Speaker 24
Specifications 41
Steady Sound 23
Stereo 24

T

Timer  Menu 33
Timer 1 and Timer 2 33
Treble 23
Troubleshooting 39
TV Features 1
Tilt Correction 34

V

Video  Menu 22
Video Label 34
VM 22